

CLOSET SUITES

Installation Instruction

**CISTERN FITTINGS
PRE-FITTED**

GENERAL INFORMATION

The closet bowls should be connected to the soil pipe by a purpose made connector. WC suite is designed to meet current Water Regulations.

WARNING Do not bed closet bowl to the floor with cement mortar otherwise the closet foot could split after installation.

SERVICING VALVES The Water Regulations have a requirement to fit a servicing valve adjacent to the cistern. This is to enable the water supply to be shut off, if required without shutting off the supply to other appliances.

CISTERN COMPONENTS If these are pre-fitted, check seal integrity and settings as instructions supplied, before assembling.


CLOSET SEAT It is recommended that fitting the closet seat be the last operation in the bathroom. This will avoid the risk of scratching the seat when tiling etc.

ALL JOINTS needing to be watertight are supplied with rubber gaskets.

Waterproof sealant **MUST NOT BE USED** to seal, as this will have a detrimental effect on all submerged rubber seals.


INSTALLATION

Position closet bowl and mark floor fixing positions

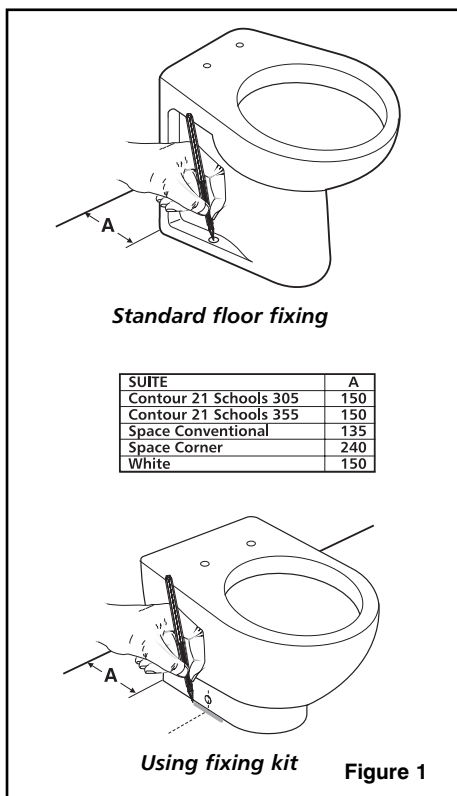


For closet suites supplied with their own fixing kits, mark the outline of the closet bowl on the floor. Mark on the floor, at both sides of the closet bowl the position of the screw holes in the closet foot, (Figure 1).

Before moving closet bowl, position the cistern, resting it on the rear of the closet and mark the cistern fixing screw hole positions on the wall, (Figure 2).

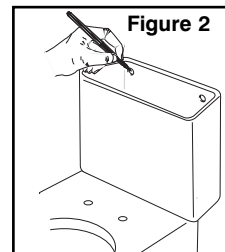

Remove the cistern and closet bowl drill and plug for standard closet floor fixing and cistern fixing, (screws not supplied).

For closets supplied with closet fixing kits, mark the position for the two floor fixing screws 40mm in from the line drawn around the closet, drill, plug and fit brackets to floor, (Figure 3).

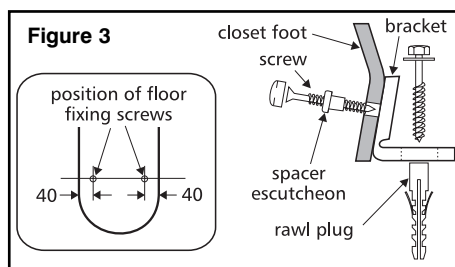


FITTING FLUSH PIPE ASSEMBLY for Space and Contour 21 WC Suites

The flush pipe is to be cut down as required, (Figure 4).

Place the coupling nut, coupling washer and backing ring (where supplied), on to the top end of the flush pipe. Insert flush pipe into the flush valve and tighten the coupling nut and coupling washer onto the flush valve. Fit the flush pipe connector to the bottom end of the pipe.

Reposition closet bowl in marked position, place cistern onto closet bowl and screw to wall with No. 12 woodscrews (not supplied). Swing flush pipe to one side at this stage to aid fitting.

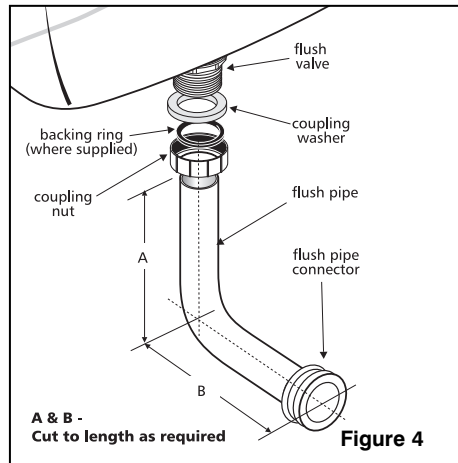



CISTERN SUPPORT BRACKETS for Space WC Suites only

For installations where the cistern does not rest on the rear of the closet bowl, alternative cistern support brackets are supplied. These are positioned and fixed on the wall, (Figure 5), locating in the recesses at the back of the cistern. Secure the cistern to the wall using No. 12 woodscrews (not supplied). The flush pipe will need to be cut to suit the installation.

FIT OUTLET CONNECTOR (not supplied), to waste pipework ready to take closet. The closet will have to be removed from its marked position for this to be done (Figure 6).

Reposition closet into position previously marked on floor making connections to both flush pipe and waste pipe. Ensure both connectors are pushed home fully, the cistern may have to be lifted slightly to aid ease of fitting.

Screw closet to floor brackets.

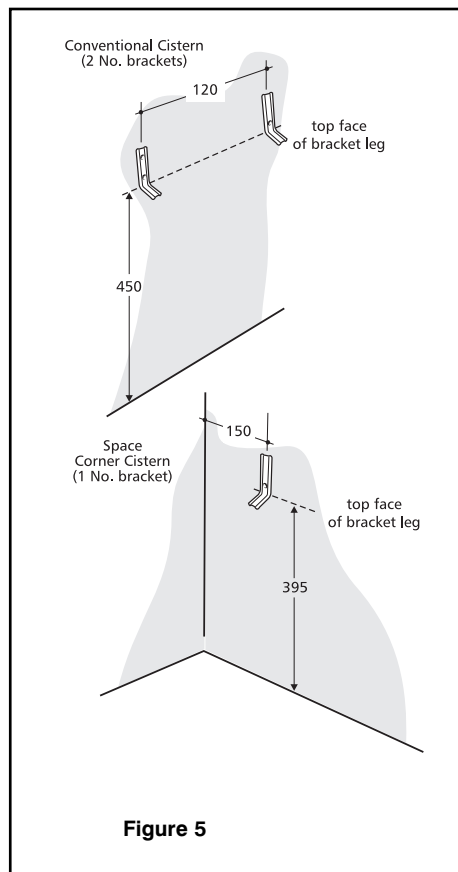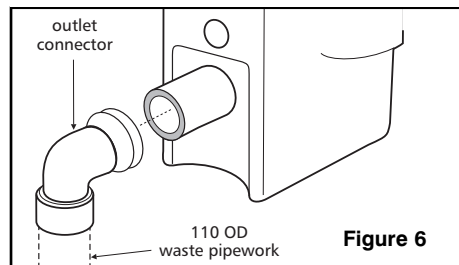


FITTING FLUSH PIPE ASSEMBLY for White WC Suite

Cut horizontal portion of the flush bend to length, (Figure 7).

Fit 'O' rings (x2) to flush bend, (Figure 8).



Insert short leg of bend (2 'O' rings) firmly into tail of valve, (Figure 8).

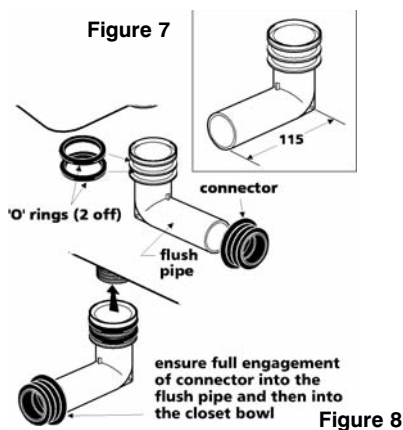

FIT OUTLET CONNECTOR (not supplied), to waste pipework, ready to take closet (Figure 9).

Re-locate closet and cistern making connection of closet to flush bend and waste outlet connector. Ensure both connectors are pushed fully home.

Note: This may be a 2 man operation.

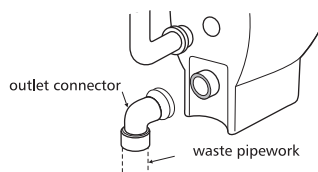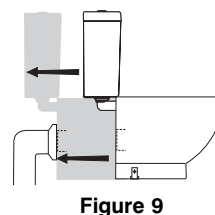

Line up closet with marks on floor and screw closet to brackets, (Figure 3). Secure cistern to wall with No. 12 woodscrews (not supplied).

CONNECT FLOAT-OPERATED VALVE

Connect float operated fill valve to water supply pipework, adjust fill valve to give correct water level as marked on cistern.

Fit outlet valve push button assembly (where applicable) to cistern lid. Refer to separate push button instructions.

Flush the closet suite and check connections for leaks.

CUSTOMER CARE HELPLINE
0870 1296085
CUSTOMER CARE FAX LINE 01482 499611
e mail: ukcustcare@IdealStandard.com

Ideal Standard pursues a policy of continuing improvement in design and performance of their products. The right is, therefore, reserved to vary specifications without notice.