



# DUAL FLUSH BUTTON

## Installation Instruction

*(To be carried out with outlet valve fitted in cistern)*

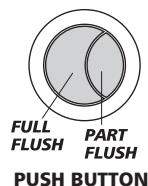


1. Fit the push button housing (1) into the cistern lid and secure with the washer and backnut, aligning the ratchet bar slots left and right (Figure A).

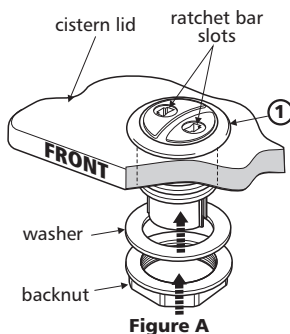

2. Push the two ratchet bars through the ratchet slots in the push button holders from the top with spigot ends facing downwards and outwards, so that the bars project approximately 10mm on the underside.


Carefully push the plunger plates A and B onto the ends of the ratchet bars, (Figure B).

3. With the flush valve in place lower the cistern lid onto the cistern.

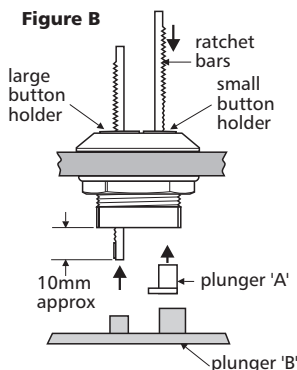

4. Whilst holding the large button holder firmly down, push the top end of the ratchet bar down until it stops, then release.

5. Repeat step 4 for the small button holder.

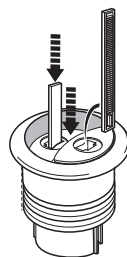

6. If the top ends of the ratchet bars are level or below the push button holder top face, push the cover caps onto the corresponding buttons, ensuring they SNAP into place.


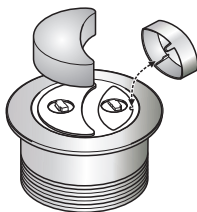


Figure C

mark and trim the ratchet bars if projecting above tops of buttons, then fit the cover caps

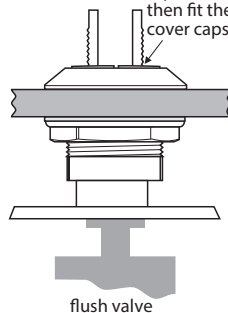

#### CUTTING RATCHET BARS

7. If they protrude above the push button holders, make a mark on the ratchet bars, level with the button holder top, see figure C.

8. Remove the cistern cover and pull the ratchet bars out of the

button holders from underneath, then remove plungers 'A' & 'B'.

9. Cut the ratchet bars just below the marks.

10. Repeat steps 2 through to 6.

#### CUSTOMER CARE HELPLINE

**01482 496318**

**CUSTOMER CARE FAX LINE 01482 499611**

**email: [customercare@idealstandard.com](mailto:customercare@idealstandard.com)**

We pursue a policy of continuing improvement in design and performance of our products.

The right is, therefore, reserved to vary specifications without notice.